

Advanced Tracker Technologies Inc

RSI Hand Punch Reset

Overview

This documents explains how to do two styles of resetting; How to reset the settings and how to reset everything.

Note

Depending on when you purchased your RSI Hand Punch will dictate which method you will use to reset the hand punch.

On the back of the hand punch you may see 5 little dip switches at the bottom left. In this case, you will use the dip switches to reset the hand punch.

If you do not see the dip switches, look for a small little button near the bottom and middle of the back of the hand punch. You will use this button to reset the clock.

Contents

Operations	<u>2</u>
Reset settings with dip switches	2
Reset everything with dip switches	2
Reset settings with button	2
Reset everything with button	2

Operations

Resetting with Dip Switches

Reset Settings

Switch up the number 5 switch, unplug power for 5 seconds, plug power back in. Once the clock boots up, set this switch back down or else the settings will reset every time there is a power outage.

Reset Everything

Switch up the number 5 and 4 switches, unplug power for 5 seconds, plug power back in. This will reset the settings and clear the databanks, **all your enrolled hands will be lost.**

Resetting with Button

Reset Settings

Unplug the power for 5 seconds, hold down the button and plug the unit back in. Keep holding the button down until the display of the clock prompts you to reset *1. Settings* or *All*. Press the appropriate option. Note pressing *9. All* will cause **all your enrolled hands to be lost.**