




Connecting a Bell to a Hand Reader through the BR-100 Relay

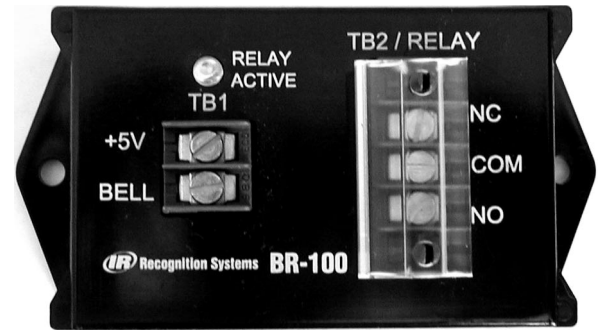


HandKey II,
HandKey-CM,
or HandPunch
3000-400

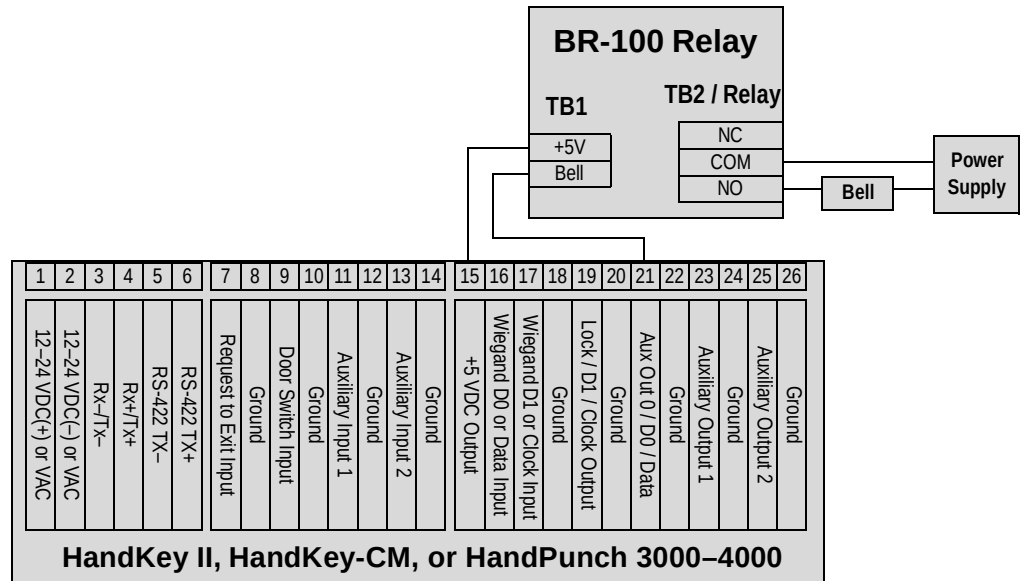

HandKey or
HandPunch


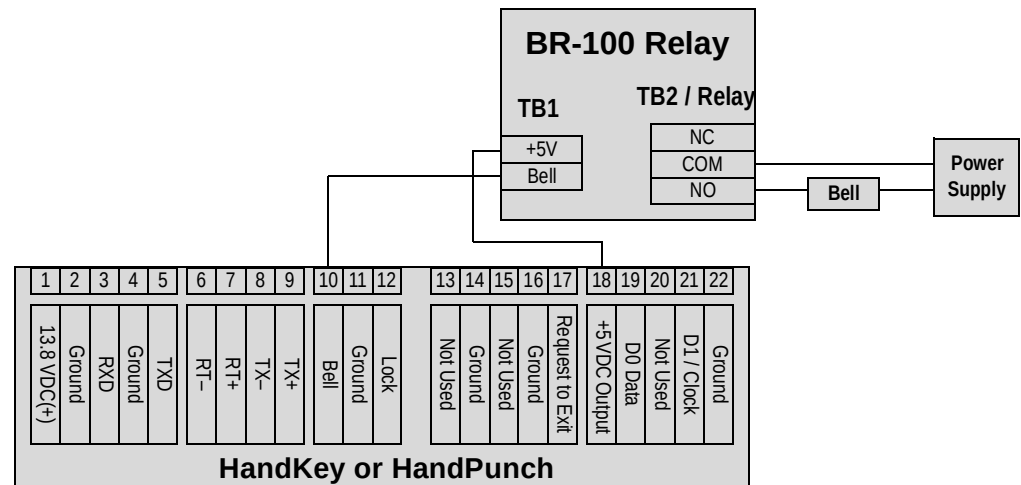


Connecting a Lock to a Hand Reader through the BR-100 Relay


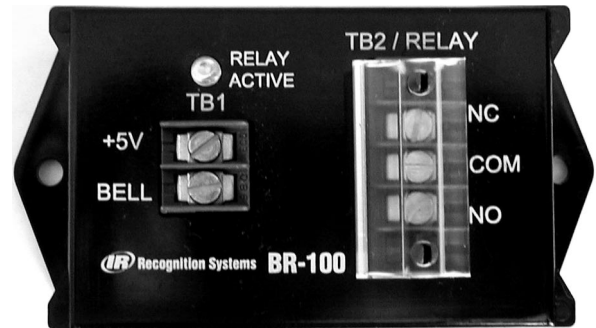


Connecting the Reader to the Relay

HandKey II,
HandKey-CM, or
HandPunch
3000–4000

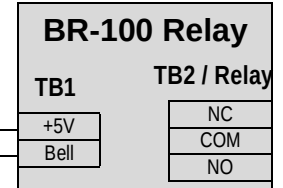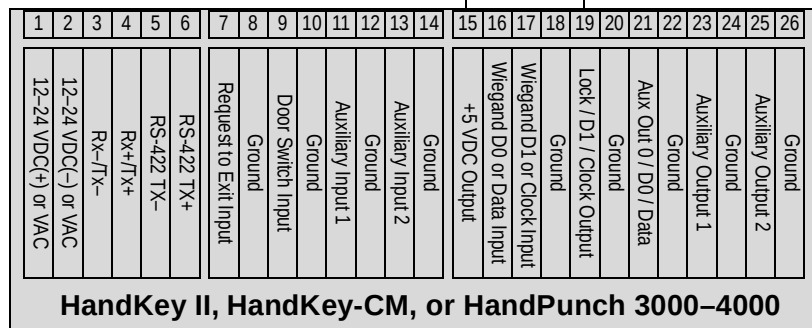


HandKey or
HandPunch

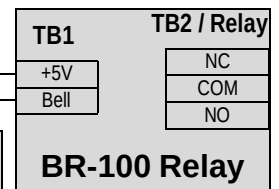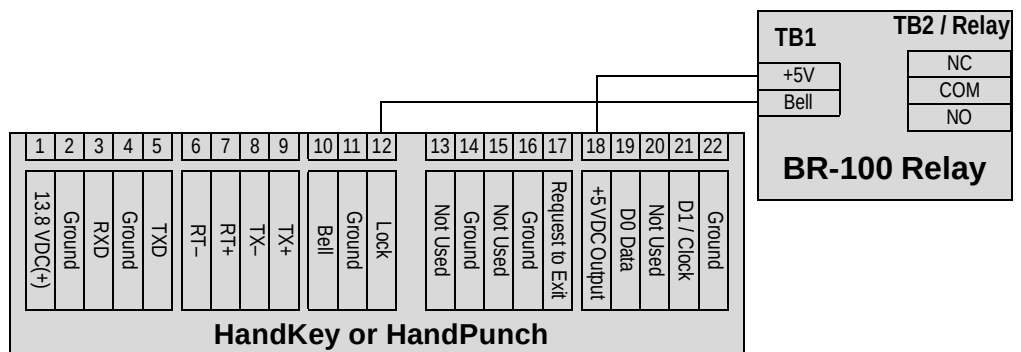

Connecting the Lock to the Relay

FailSafe Lock: The FailSafe lock guarantees access if power fails. The lock requires power to stay locked; during a power failure, access is granted.

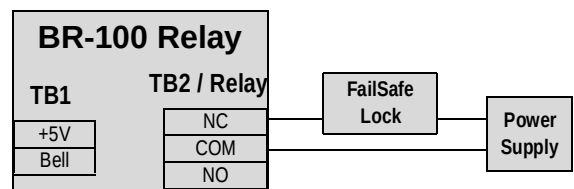

FailSecure Lock: The FailSecure lock guarantees security if power fails. The lock requires power to unlock; during a power failure, access is denied.

